

SPD/SPD-R/SPD-SL/SHIMANO CLICK'R CLEAT APPLICATION TABLE

The table shows the recommended cleats for each SPD, SPD-R, SPD-SL and Shimano Click'R pedal.
Cleats listed under the table can be substituted for the recommended cleat, but with certain restrictions as listed.

Pedal							
		SPD-SL	SPD-R	SPD			SHIMANO CLICK'R
		PD-9000 PD-7900 PD-7810 PD-7800 PD-7750 PD-6700-C PD-6700 PD-R670 PD-6620 PD-6610 PD-5700 PD-5610 PD-5600 PD-R600 PD-R540 PD-R540-LA	PD-7701 PD-7700 PD-6601 PD-6600 PD-5500 PD-R535	PD-M985 PD-M980 PD-M970 PD-M959 PD-M785 PD-M780 PD-M770 PD-M540 PD-M530 PD-M520 PD-M647 PD-T780 PD-A600 PD-A530 PD-A520	PD-M858	PD-M646 PD-M545 PD-M536 PD-M424 PD-M515 PD-M505 PD-M324 PD-M323 PD-A515	PD-T700 PD-T400
Shoes	SH-R320/ SH-R241/ SH-R170/ SH-TR60/ SH-WR82/ SH-WR61/ SH-WT60	SM-SH10 SM-SH11 SM-SH12	SM-SH90** SM-SH91**	—	—	—	—
	SH-R107*/ SH-R088*/ SH-R078*/ SH-R064* SH-TR31*/ SH-WR41*/ SH-WR31*						
	SH-M315/ SH-M240/ SH-XC60/ SH-XC50/ SH-XC50N/ SH-XC30/ SH-M162/ SH-M088/ SH-M064/ SH-MW81/ SH-AM45/ SH-MT91/ SH-MT71/ SH-MT53/ SH-MT43/ SH-MT33/ SH-MT23/ SH-SD66/ SH-RT82/ SH-RT32 SH-CT70/ SH-CT45/ SH-CT40/ SH-UT70/ SH-CW40/ SH-WM82/ SH-WM62/ SH-WM51/ SH-WM43/SH-WR35	—	—	SM-SH51 SM-SH56	SM-SH52	SM-SH51 SM-SH52 SM-SH55 SM-SH56	SM-SH51 SM-SH56

SH-R320/ R241/ R170/ R107/ 088/ R078/ R064/ TR60/ TR31/ WR82/ WR61/ WR41/ WR31/ WT60 can also take Look® cleats.
*SH-R107/ R088/ R078/ R064/ RW81/ TR31/ WR41/ WR31 can be used with SPD cleats with the adapter SM-SH40.
** SH-R320/ R241/ R170/ R107/ R088/ R078/ R064 / TR60/ TR31/ WR82/ WR61/ WR41/ WR31/ WT60 can be used with SPD-R cleat with the adapter SM-SH85.
"Look" is a registered trademark of LOOK S.A.

	DURA-ACE axle	Cartridge axle	Loose ball axle
TL-HS40 TL-PD77 20mm	PD-9000, PD-7900, PD-7810 PD-7800, PD-7750 PD-7701, PD-7700		
TL-PD33 7&10mm 10&13mm		PD-7410, PD-6700, PD-R670, PD-6620, PD-6610, PD-6601, PD-6600, PD-6500, PD-R600, PD-5700, PD-5610, PD-5600, PD-5500, PD-R540, PD-R540-LA, PD-R535 PD-M858, PD-M747, PD-M545, PD-M536, PD-M530, PD-M520, PD-M515, PD-M434, PD-M424, PD-T400 PD-A530, PD-A525, PD-A520, PD-A515 PD-6700-C, PD-M985, PD-M980, PDM970, PD-M959, PD-M785, PD-M780, PD-M770, PD-M540, PD-M647, PD-M646, PD-MX30, PD-MX80, PD-A600, PD-T780, PD-T700	PD-M505 PD-M324
TL-PD63 7&8mm 10&11mm		All of above Cartridge axle	PD-M636 PD-M535 PD-M323

 Use TL-PD40 to loosen/ tighten lock bolt
For pedal installation or removal

PD-9000/ 7900/ 7810/ 7800/ 7750/ 7701/ 7700/ 6700-C/ M985/ M980/ M970/ M959/ M785/ M780/ M770/ M540/ T780/ T700/ A600 Use 8mm allen wrench.
PD-6700/ R670/ 6620/ 6610/ 5700/ 5610/ 5600/ R600/ R540/ R540-LA/ M647/ M545/ M540/ M536/ M424/ M530/ M520/ M515/ M505/ M324/ MX80/ MX30/ T400/ A530/ A520/ A515 Use 15mm wrench.

SPD/SPD-R/SPD-SL/SHIMANO CLICK'R PEDAL & CLEAT SETS

1. SM-SH12 cleat set is included with PD-9000 pedal packages.
2. SM-SH11 cleat set is included with PD-7900/ PD-7810/ PD-7800/ PD-7750/
PD-6700-C/ PD-6700/ PD-R670/ PD-6620/ PD-6610/ PD-5700/ PD-5610/
PD-5600/ PD-R600/ PD-R540 and PD-R540-LA pedal packages.
3. SM-SH51 cleat set is included with PD-M985/ PD-M980/ PD-M970/ PD-M959/
PD-M785/ PD-M780/ PD-M770/ PD-M647/ PD-M545/ PD-M540/ PD-M536/
PDM530/ PD-M424/ PD-M520/ PD-M515/ PD-M505/ PD-A600/ PD-A530/
PD-A520 and PD-A515 pedal packages.
4. SM-SH56 cleat set is included with PD-T780/ PD-T700/ PD-T400 and PD-M324
pedal packages.
(Some specifications do not include any cleats in the pedal packages.)